

Projector/Computer Set Up Instructions

First, unpack the following items:

From the **projector** bag:

- Projector
- Power cord
- Computer connection cord (has blue plugs on either side with “C” on them)
- Extension cord

 
From the **computer** bag:

- Computer
- Power cord

To Power On, complete the following steps IN ORDER (see labeled steps in pictures below):




Back of **projector**

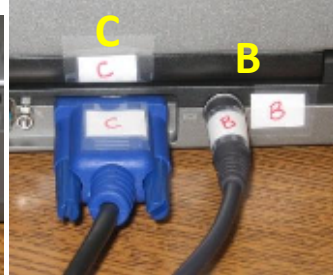

Back of **computer**



 Top of **projector**

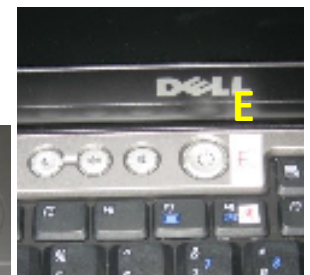

Top of **computer**

- Connect the projector power cord (“A”) to the back of the **projector** (“A”) and plug the cord into a wall outlet (you can use the extension cord if needed).
- Connect the computer power cord (“B”) to the back of the **computer** (“B”) and plug the cord into a wall outlet (you can use the extension cord if needed). **DO NOT TURN THE COMPUTER ON YET!!!**
- Connect the computer connection cord (“C”) to the labeled areas on the back of the **computer** and **projector** (“C”).
- Press the power button on the top of the **projector** (“D”). After a few seconds you will hear the projector turn on and the power light will turn green. Remember to take the lens cap off of the projector lens at this point.
- ONLY AFTER THE PROJECTOR HAS BEEN TURNED ON**, press the power button on the **computer** located above the keyboard (“E”).
- To log on to the **computer**, check the “Workstation Only” box in the bottom left corner of the log in box. Then enter the following:
Username: user
Password: user
- You should now see the computer desktop projected through the projector.

*If you do not see the computer reflected through the projector, press the Fn and F8 keys (marked with * on the keyboard) on the computer simultaneously*

Projector/Computer Set Up Instructions

To Power Off, complete the following steps IN ORDER:

- A. Shut down the **computer**.
- B. Press the Power button (“D”) on the top of the **projector**. After a few seconds you will hear the projector turn off and the power light will turn orange.
- C. Replace the lens cap on the **projector** lens
- D. Detach all cords (**projector** power cord “A”, **computer** power cord “B”, and computer connection cord “C”)
- E. Neatly ravel cords and pack them as follows:
Into the **projector** bag:
 - Projector
 - Projector power cord
 - Computer connection cord (has blue plugs on either side with “C” on them)
 - Extension cordInto the **computer** bag:
 - Computer
 - Computer power cord
- F. Replace both bags into the appropriate equipment storage area.

Should you have any difficulties, please contact the OLLI office at (864) 656-6912.